



98-M4

Power Sucker

Rod Tongs



CONTENTS

SECTION	SUBJECT	PAGE NO.
I	INTRODUCTION	1
II	SPECIFICATIONS	
	Hydraulic.....	3
	Air	3
III	INSTALLATION	
	Hanging Tong	5
	Balance Adjustment.....	5
	Back-up Wrench	5
	Hoses	5
	Hydraulic Oil	5
IV	OPERATION	
	Tong Operation.....	7
	Setting the Relief Valve.....	7
	Calculating Preload Valves for Sucker Rod Pin and Coupling Joint	7
	Tong Calibration.....	7
	Changing Rotation Direction	8
V	MAINTENANCE	
	Check List.....	11
	Lubrication	11
VI	TROUBLESHOOTING	
	Tong Out of Time.....	13
	Torque Indicator Malfunction	13
	Jumping Out of Time	14
	Jaws Fail to Actuate	15
	Oil Leaking from Weep Hole.....	15
VII	SHOP REPAIRS	
	Changing Brake Band.....	17
	Replacing Outer Ring Roller Pins and Bushings	19
	Replace Outer Wear Rings	19
	Tong Disassembly	20
VIII	FRAME ASSEMBLY REPLACEMENT PARTS	27
IX	INNER RING ASSEMBLIES AND BACK-UP WRENCHES	33



CONTENTS

SECTION	SUBJECT	PAGE NO.
X	HYDRAULIC MOTOR AND VALVE ASSEMBLY	37
XI	AIR MOTOR ASSEMBLY	39
XII	AIR CONTROL VALVE	41
XIII	OPERATING RATINGS	43
XIV	SPARE PARTS FOR ONE YEAR'S OPERATION	45
